




INSTRUCTIONS MANUAL AQ-L25

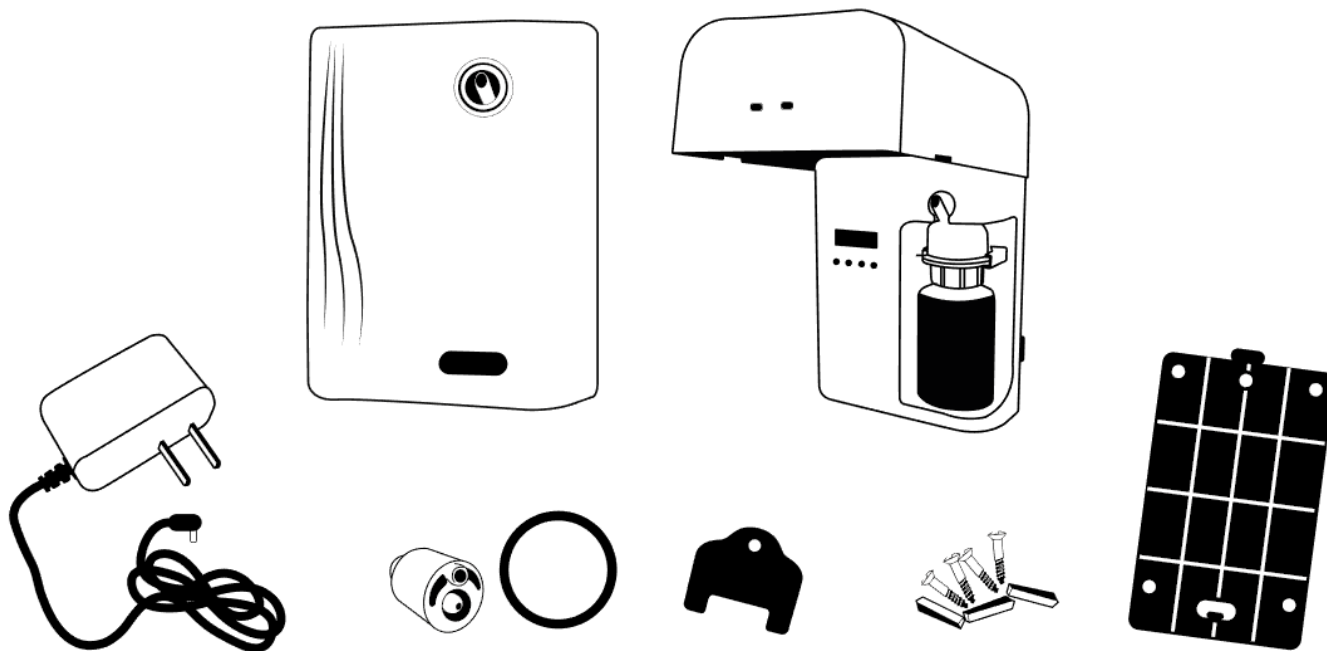

PARTS & SPECS:

Content:

- (1) Continuous Fragrance Microdiffuser™
- (1) Reusable Nozzle for the bottle cap (*)
- (1) Key
- (4) Screws
- (1) Wall support
- (1) Power cable

(*) Each device comes with only one reusable nozzle for fragrances diffusion. Do not dispose them to avoid additional costs.
FOR SUPPLIES, REPLACEMENTS OR ADDITIONAL PARTS PURCHASE VISIT: www.aromaquest.com

Bottle of Fragrance:

- Fragrances are sold separately.
- Place the bottle of fragrance on the device 5 seconds after done all the programming, thus avoiding contact of the product with eyes and skin.
- Use only AromaQuest® 200ml bottles of the fragrance of your choice on this equipment
- Do not alter the original content of the fragrance in the bottle.
- The fragrance performance in this equipment has been calculated based on 1 bottle of 200ml (See the *Performance Guide* in this manual).

INSTALLATION INSTRUCTIONS:

Installation:

- Mount the wall support vertically. Then snap the device into the holder and make sure the cap and power cord can be easily manipulated. Do not obstruct the scented air outlet in the microdiffuser of this equipment.
- Install the device on the highest part of walls, ensuring that the bottle nozzle is at least 6" from the ceiling. If possible, install it near air conditioning outlets or in ventilated places with traffic of people. Avoid installing it near air exhausters.
- To install this device in air-conditioning ducts, connect a special air outlet hose (part sold separately) from the outlet of the diffuser nozzle to the exit of the air conditioning duct.
- To remove dust, stains, or dirt from the device, use a cloth moistened with water on the outside. Do not clean the nozzle or electronic part of the equipment.

Quick Activation:

1. Insert the key, without turning, into the bottom of the unit (being vertical) and press until the cover is opened upwards. You can use the side slots to uncover more quickly. Keep the key in a safe place.
2. Connect the power cable .
3. Set the device schedule and intensity before placing the bottle of fragrance. Read the *Programming Instructions Section* for more information .
4. Remove the original cap from the fragrance bottle and screw the nozzle into it before installing. Then insert the bottle vertically into the unit, pressing the nozzle against the diffuser until it clicks into place.
5. Close the diffuser's cover until it clicks. No need to lock.

PROGRAMMING INSTRUCTIONS:

Date-Time Settings:

1. When the display is lit, press SET to enter the schedule. While in this function, you will feel that the equipment dispenses as an activation feature. For this reason, do not install the bottle until the entire programming is complete.
2. The diffuser operates under the 24-hour time system. Use the UP and DOWN buttons to set the time (hours and minutes) and day.
3. Press SET to save all the changes when done. The local time changing feature on this machine is very sensitive since it always saves the last configuration received while being manipulated.

Memory Setting:

1. The equipment allows programming up to 4 memories that work simultaneously. Set each of them so that they do not match in schedules or intensity of fragrances. Otherwise, the diffuser won't operate properly.

2. Chose the memory to be programmed (1 to 4) by pressing MODE. The first memory is the *Default Mode*. The screen shows the starting time and when you press MODE again, it shows the ending time of the same already-set memory.
3. In the memory to be programmed, press SET to enter. First select the starting time (hours and minutes) using the SET, UP and DOWN buttons. Then press SET to select the days on which this configuration is desired. Use the UP and DOWN buttons to chose among the default options for days. Press MODE to save the changes.
4. Then choose the ending time (hours and minutes) with the use of the SET, UP and DOWN buttons. Press MODE to save the changes
5. Set the fragrance intensity with working and pause times (using a range of 5 to 300 seconds)
 - a. Set the working time using the UP and DOWN buttons and press MODE to go to the next step
 - b. Then set the pause time using the UP and DOWN buttons.
 - c. You also have the option of controlling the performance of the fragrance bottle by programming the device according to the attached *Performance Guide*. Knowing how many hours per month the diffuser will work (use the *Hours per Month Calculation Worksheet* from this manual) find the closest value to that number in the left column of the *Performance Guide* and decide if you want the smell to be: Soft, Intermediate or Intense. Then chose on that same grays-range, how many days the fragrance would last and, as a result of that cell, the top of the table will tell you how many seconds the working and pause times would last. Use these parameters to program the equipment.
6. When you have finished programming that memory, press MODE to save all the changes. The device will dispense to indicate that it has already been activated.
7. Repeat steps 2 to 5 to program the following memories if necessary.
8. Finally, place the bottle of fragrance and protect the equipment by closing the cover.

Quick Restart:

Press MODE for 10 seconds to delete all the programming on the device and the *Default Mode* will be active again. The only settings that has to be manually changed is the local time

Pause Mode:

Occurs when the device is not actively diffusing the fragrance because it is not programmed for the current time and the displays shows the word *Pause*. This pause expires when the diffuser is activated again during preset times. Also, if you suddenly stop programming, the screen will go back to showing the current time, saving the last settings

Default Mode:

Is the configuration stored in the first memory of the diffuser and it can be modified to suit the user. It starts at 8:00 and ends at 22:00 (assuming the base time GMT+13). It operates from Monday thru Sunday, dispensing fragrance every 60 seconds, for 60 continuous seconds and with an average yield of 10 days.

HOURS PER MONTH CALCULATION WORKSHEET:

WEEKDAYS	INITIAL TIME	FINAL TIME	TOTAL HOURS
MONDAY			
TUESDAY			
WEDNESDAY			
THURSDAY			
FRIDAY			
SATURDAY			
SUNDAY			
TOTAL HOURS PER WEEK:			
(x 4 weeks)			(x 4)
TOTAL HOURS PER MONTH:			

Recommended Settings

For Wall Mount Installations

Fragrance Microdifusser AromaQuest AQ-L25

Fragrance Refill Lifespan in Days.

For Wall Mount Installations

Scent Pause (Seg)	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100	
Scent Work (seg)	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	
Hours per Month	Duration in Days / <i>Dias de Duracion</i>																			
240	17	23	29	35	41	46	52	58	64	69	75	81	87	93	98	104	110	116	122	
260	16	21	27	32	37	43	48	53	59	64	69	75	80	85	91	96	101	107	112	
280	15	20	25	30	35	40	45	50	55	60	64	69	74	79	84	89	94	99	104	
300	14	19	23	28	32	37	42	46	51	56	60	65	69	74	79	83	88	93	97	
320	13	17	22	26	30	35	39	43	48	52	56	61	65	69	74	78	82	87	91	
340	12	16	20	25	29	33	37	41	45	49	53	57	61	65	69	74	78	82	86	
360	12	15	19	23	27	31	35	39	42	46	50	54	58	62	66	69	73	77	81	
380	11	15	18	22	26	29	33	37	40	44	48	51	55	58	62	66	69	73	77	
400	10	14	17	21	24	28	31	35	38	42	45	49	52	56	59	63	66	69	73	
420	10	13	17	20	23	26	30	33	36	40	43	46	50	53	56	60	63	66	69	
440	9	13	16	19	22	25	28	32	35	38	41	44	47	51	54	57	60	63	66	
460	9	12	15	18	21	24	27	30	33	36	39	42	45	48	51	54	57	60	63	
480	9	12	14	17	20	23	26	29	32	35	38	41	43	46	49	52	55	58	61	
500	8	11	14	17	19	22	25	28	31	33	36	39	42	44	47	50	53	56	58	
520	8	11	13	16	19	21	24	27	29	32	35	37	40	43	45	48	51	53	56	
540	8	10	13	15	18	21	23	26	28	31	33	36	39	41	44	46	49	51	54	
560	7	10	12	15	17	20	22	25	27	30	32	35	37	40	42	45	47	50	52	
580	7	10	12	14	17	19	22	24	26	29	31	34	36	38	41	43	45	48	50	
600	7	9	12	14	16	19	21	23	25	28	30	32	35	37	39	42	44	46	49	
620	7	9	11	13	16	18	20	22	25	27	29	31	34	36	38	40	43	45	47	
640	7	9	11	13	15	17	20	22	24	26	28	30	33	35	37	39	41	43	46	
660	6	8	11	13	15	17	19	21	23	25	27	29	32	34	36	38	40	42	44	
680	6	8	10	12	14	16	18	20	22	25	27	29	31	33	35	37	39	41	43	
700	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40	42	
720	6	8	10	12	14	15	17	19	21	23	25	27	29	31	33	35	37	39	41	
740	6	8	9	11	13	15	17	19	21	23	24	26	28	30	32	34	36	38	39	

- 1- Calculate the **Hours per Month** that your unit will be running.
- 2- On the row with your **Hours per Month**, find the column with the number highlighted.
- 3- Program **Scent Pause and Scent Work** with the numbers on top of the column.

With this settings the refill for your devise will last at least 30 days. If you want to increase fragrance intensity, set a lower **Scent Pause**; if you want to reduce it, set a higher **Scent Pause** (on the column that you set you can see the duration in days for the refill according to your settings).

Recommended Settings

For HVAC Installations

Fragrance Microdifusser AromaQuest AQ-L25

Fragrance Refill Lifespan in Days.

For HVAC Installations


Scent Pause (Seg)	300	300	300	300	300	300	300	300	300	300	300	300	300	300	300	300	300	300	300
Scent Work (seg)	300	250	200	175	150	125	100	75	70	65	60	55	50	45	40	35	30	25	20
Hours per Month	Duration in Days / <i>Dias de Duracion</i>																		
240	12	13	14	16	17	20	23	29	31	32	35	37	41	44	49	55	64	75	93
260	11	12	13	14	16	18	21	27	28	30	32	34	37	41	45	51	59	69	85
280	10	11	12	13	15	17	20	25	26	28	30	32	35	38	42	47	55	64	79
300	9	10	12	13	14	16	19	23	24	26	28	30	32	35	39	44	51	60	74
320	9	10	11	12	13	15	17	22	23	24	26	28	30	33	37	42	48	56	69
340	8	9	10	11	12	14	16	20	22	23	25	26	29	31	35	39	45	53	65
360	8	8	10	10	12	13	15	19	20	22	23	25	27	30	33	37	42	50	62
380	7	8	9	10	11	12	15	18	19	21	22	24	26	28	31	35	40	48	58
400	7	8	9	9	10	12	14	17	18	19	21	22	24	27	30	33	38	45	56
420	7	7	8	9	10	11	13	17	17	19	20	21	23	25	28	32	36	43	53
440	6	7	8	9	9	11	13	16	17	18	19	20	22	24	27	30	35	41	51
460	6	7	8	8	9	10	12	15	16	17	18	19	21	23	26	29	33	39	48
480	6	6	7	8	9	10	12	14	15	16	17	19	20	22	25	28	32	38	46
500	6	6	7	8	8	9	11	14	15	16	17	18	19	21	24	27	31	36	44
520	5	6	7	7	8	9	11	13	14	15	16	17	19	20	23	26	29	35	43
540	5	6	6	7	8	9	10	13	14	14	15	17	18	20	22	25	28	33	41
560	5	5	6	7	7	8	10	12	13	14	15	16	17	19	21	24	27	32	40
580	5	5	6	6	7	8	10	12	13	13	14	15	17	18	20	23	26	31	38
600	5	5	6	6	7	8	9	12	12	13	14	15	16	18	20	22	25	30	37
620	4	5	6	6	7	8	9	11	12	13	13	14	16	17	19	21	25	29	36
640	4	5	5	6	7	7	9	11	11	12	13	14	15	17	18	21	24	28	35
660	4	5	5	6	6	7	8	11	11	12	13	14	15	16	18	20	23	27	34
680	4	4	5	6	6	7	8	10	11	11	12	13	14	16	17	20	22	27	33
700	4	4	5	5	6	7	8	10	10	11	12	13	14	15	17	19	22	26	32
720	4	4	5	5	6	7	8	10	10	11	12	12	14	15	16	18	21	25	31
740	4	4	5	5	6	6	8	9	10	11	11	12	13	14	16	18	21	24	30

- 1- Calculate the **Hours per Month** that your unit will be running.
- 2- On the row with your **Hours per Month**, find the column with the number highlighted.
- 3- Program **Scent Pause** and **Scent Work** with the numbers on top of the column.

With this settings the refill for your devise will last at least 30 days. If you want to increase fragrance intensity, set a lower **Scent Pause**; if you want to reduce it, set a higher **Scent Pause** (on the column that you set you can see the duration in days for the refill according to your settings).



MANUAL DE INSTRUCCIONES AQ-L25

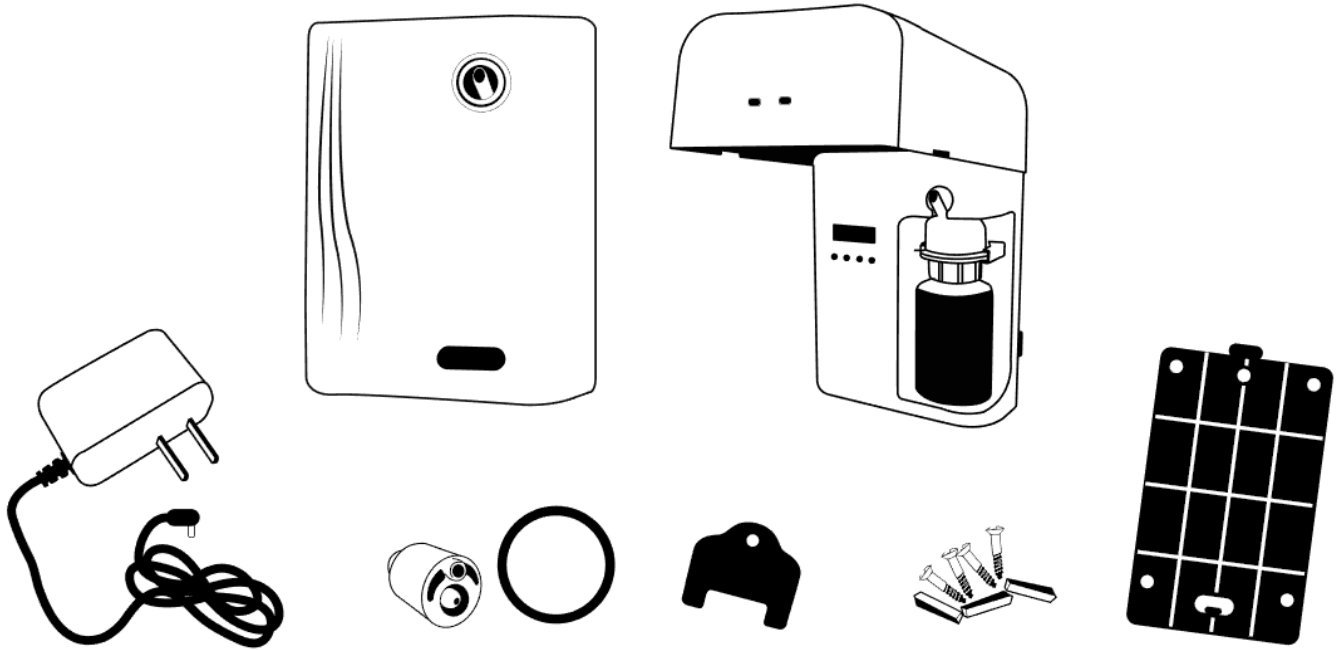

ESPECIFICACIONES Y PARTES:

Contiene:

- (1) Microdifusor de Fragancia Continua™
- (1) Boquilla reusable para la tapa del frasco de fragancia (*)
- (1) Llave
- (4) Tornillos
- (1) Soporte de pared
- (1) Cable adaptador de corriente

(*) Cada equipo incluye **una sola boquilla reusable** para distintas fragancias. No las deseche para evitar gastos adicionales

PARA LA COMPRA DE SUMINISTROS Y PARTES ADICIONALES VISITE: www.aromaquest.com

Botella de Fragancia:

- Las fragancias no vienen incluidas en el equipo. Debe adquirirlas por separado.
- Coloque la botella de la fragancia 5 segundos después de haber programado el equipo, evitando así el contacto del producto con ojos y piel.
- Utilice únicamente botellas de 200ml AromaQuest® de la fragancia de su preferencia en este equipo.
- No altere el contenido de la fragancia en la botella.

- El rendimiento de la fragancia para este equipo ha sido calculado con 1 botella de 200ml (Ver Tabla Guía de Rendimiento en este manual). Si se instala una botella con menos cantidad, los valores de la tabla ya no serían reales.

INSTRUCCIONES DE INSTALACIÓN:

Instalación:

- Instale el soporte de pared de forma vertical. Luego encaje el dispositivo en el soporte y asegúrese que la tapa y el cable de corriente se pueden manipular con facilidad. Evite que la salida de aire perfumado en el microdifusor quede obstruida.
- Instale el equipo en partes altas de paredes, procurando que la boquilla de la botella quede a una distancia mínima de 6" del techo. De ser posible, instélelo cerca de las salidas de aire acondicionado o en lugares ventilados, con tráfico de personas. Evite instalarlo cerca de extractores de aire.
- Para instalar el equipo en ductos de aire acondicionado, conecte un tubo flexible, especial para salidas de aire, disponible en AromaQuest® (el tubo se vende por separado) desde la salida de la boquilla difusora hasta la salida del ducto de aire acondicionado.
- Para eliminar polvo, manchas o sucio del dispositivo, utilice un paño humedecido en agua, en la parte exterior. No limpie la boquilla ni la parte electrónica del equipo.

Activación Rápida:

1. Inserte la llave, sin girar, en la parte inferior del equipo (estando en forma vertical) y presione hasta lograr abrir la tapa hacia arriba. Puede utilizar las ranuras laterales para destapar más rápidamente. Conserve la llave en un lugar seguro.
2. Conecte el cable de corriente.
3. Programe el equipo (horarios e intensidad) antes de colocar la botella de la fragancia. Lea las *Instrucciones de Programación* para mayor información.
4. Retire la tapa original del frasco. Enrosque la boquilla a la botella antes de instalarla. Luego inserte la botella de forma vertical en el equipo, haciendo presión de la boquilla en el difusor hasta que encaje.
5. Cierre la tapa del equipo hacia abajo. No necesita asegurar con llave.

INSTRUCCIONES DE PROGRAMACIÓN:

Configure Fecha y Hora Actual:

1. Al visualizar la pantalla encendida, presione SET para entrar a programar el horario. Mientras esté en esta función, sentirá que el equipo dispensa, como muestra de activación. Por lo tanto se recomienda que no se instale la botella hasta completar toda la programación.
2. Presione UP y DOWN para escoger la hora, minutos y día de la semana. La programación del equipo se realiza bajo el sistema horario de 24 horas. Presione SET para guardar los cambios. La función de

cambio de hora local en esta máquina es muy sensible ya que siempre guarda la última configuración recibida mientras se manipula.

Configure la Memoria:

9. El equipo permite programar hasta 4 memorias que funcionan simultáneamente. Configure cada una de manera que no coincidan en los horarios o la intensidad de las fragancias. De lo contrario, el difusor no funcionará correctamente.
10. Seleccione la memoria que desea programar (1 a 4) presionando MODE. La primera memoria es el modo predeterminado. La pantalla muestra la hora de inicio y cuando vuelve a presionar MODE, muestra el tiempo de finalización de la misma memoria ya configurada
11. En la memoria que va a programar, presione SET para entrar. Primero, seleccione la hora de inicio (horas y minutos) con los botones SET, UP y DOWN. Luego presione SET para seleccionar los días en los que se desee esta configuración. Utilice los botones ARRIBA y ABAJO para elegir entre las opciones predeterminadas de días. Presione MODE para guardar los cambios
12. Luego seleccione la hora de finalización (horas y minutos) con el uso de los botones SET, UP y DOWN. Presione MODE para guardar los cambios
13. Ajuste la intensidad de la fragancia con los tiempos de activación y pausa (utilizando un rango de 5 a 300 segundos). Ajuste el tiempo de activación utilizando UP y DOWN y presione MODE. Ajuste el tiempo de pausa utilizando UP y DOWN.

También tiene la opción de controlar el rendimiento de la botella de fragancia programando el dispositivo de acuerdo con la *Guía de Rendimiento* adjunta. Sabiendo cuántas horas al mes funcionará el difusor (utilice la *Hoja de Cálculo de Horas Por Mes* de este manual), busque el valor más cercano a ese número en la columna izquierda de la *Guía de Rendimiento* y decida si desea que el olor sea suave, intermedio o intenso. Luego elija en ese mismo rango de grises, cuántos días duraría la fragancia y, como resultado de esa celda, la parte superior de la tabla le indicará cuántos segundos durarían los tiempos de activación y pausa. Utilice estos parámetros para programar el equipo.

6. Cuando haya terminado de programar esa memoria, presione MODE para guardar todos los cambios. El dispositivo dispensará para indicar que ya ha sido activado
7. Repita los pasos 2 a 5 para programar las siguientes memorias si es necesario
8. Finalmente, coloque la botella de fragancia y proteja el equipo cerrando la tapa

Reinicio Rápido:

Presione MODE durante 10 segundos y el *Modo de Fábrica* se vuelve a activar. Los únicos cambios que se deben hacer manualmente, cuando se desee, son la hora y el día

Modo de Pausa:

Ocurre cuando el difusor, estando operativo (cable conectado), no dispensa por no estar programado para ese momento. Mientras el equipo no dispense, estará pausado. Por otra parte, si el equipo está siendo programado y se deja de manipular por más de 5 segundos, la pantalla mostrará de nuevo la hora local y quedarán grabados los últimos cambios realizados

Modo de Fábrica:

Es la programación predeterminada que funciona en el equipo, en la primera memoria y puede modificarse a gusto del usuario. Inicia a las 8:00h y culmina a las 22:00h (considerando que la hora base es GMT+13). Opera de lunes a domingo, dispensando fragancia cada 60 segundos, durante 60 segundos continuos y con un rendimiento promedio de 10 días.

Programación Recomendada

Para Instalaciones en Paredes

Microdifusor de Fragancia AromaQuest AQ-L25

Durabilidad de la Recarga de Fragancia en Días.

Para Instalaciones en Paredes

Scent Pause (Seg)	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100
Scent Work (seg)	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5	5
Hours per Month	Duration in Days / <i>Días de Duración</i>																		
240	17	23	29	35	41	46	52	58	64	69	75	81	87	93	98	104	110	116	122
260	16	21	27	32	37	43	48	53	59	64	69	75	80	85	91	96	101	107	112
280	15	20	25	30	35	40	45	50	55	60	64	69	74	79	84	89	94	99	104
300	14	19	23	28	32	37	42	46	51	56	60	65	69	74	79	83	88	93	97
320	13	17	22	26	30	35	39	43	48	52	56	61	65	69	74	78	82	87	91
340	12	16	20	25	29	33	37	41	45	49	53	57	61	65	69	74	78	82	86
360	12	15	19	23	27	31	35	39	42	46	50	54	58	62	66	69	73	77	81
380	11	15	18	22	26	29	33	37	40	44	48	51	55	58	62	66	69	73	77
400	10	14	17	21	24	28	31	35	38	42	45	49	52	56	59	63	66	69	73
420	10	13	17	20	23	26	30	33	36	40	43	46	50	53	56	60	63	66	69
440	9	13	16	19	22	25	28	32	35	38	41	44	47	51	54	57	60	63	66
460	9	12	15	18	21	24	27	30	33	36	39	42	45	48	51	54	57	60	63
480	9	12	14	17	20	23	26	29	32	35	38	41	43	46	49	52	55	58	61
500	8	11	14	17	19	22	25	28	31	33	36	39	42	44	47	50	53	56	58
520	8	11	13	16	19	21	24	27	29	32	35	37	40	43	45	48	51	53	56
540	8	10	13	15	18	21	23	26	28	31	33	36	39	41	44	46	49	51	54
560	7	10	12	15	17	20	22	25	27	30	32	35	37	40	42	45	47	50	52
580	7	10	12	14	17	19	22	24	26	29	31	34	36	38	41	43	45	48	50
600	7	9	12	14	16	19	21	23	25	28	30	32	35	37	39	42	44	46	49
620	7	9	11	13	16	18	20	22	25	27	29	31	34	36	38	40	43	45	47
640	7	9	11	13	15	17	20	22	24	26	28	30	33	35	37	39	41	43	46
660	6	8	11	13	15	17	19	21	23	25	27	29	32	34	36	38	40	42	44
680	6	8	10	12	14	16	18	20	22	25	27	29	31	33	35	37	39	41	43
700	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40	42
720	6	8	10	12	14	15	17	19	21	23	25	27	29	31	33	35	37	39	41
740	6	8	9	11	13	15	17	19	21	23	24	26	28	30	32	34	36	38	39

1. Calcule las **Horas por Mes** que operara su equipo.
- 2- Encuentre en línea de Horas por Mes la columna con el número resaltado.
- 3- Programe Scent Pause y Scent Work con los números de arriba de la columna.

De esta manera el relleno de su equipo durara por lo menos 30 días. Si desea aumentar la intensidad de la fragancia, programe un tiempo de Scent Pause menor; si desea reducirla, programe un tiempo de Scent Pause mayor (en la columna podrá ver la duración en días de su programación).

Programación Recomendada

Para Instalaciones en Ductos Aires Acondicionados

Microdifusor de Fragancia AromaQuest AQ-L25

Durabilidad de la Recarga de Fragancia en Días.

Para Instalaciones en Ductos
Aires Acondicionados

Scent Pause (Seg)	300	300	300	300	300	300	300	300	300	300	300	300	300	300	300	300	300	300	300
Scent Work (seg)	300	250	200	175	150	125	100	75	70	65	60	55	50	45	40	35	30	25	20
Hours per Month	Duration in Days / Dias de Duracion																		
240	12	13	14	16	17	20	23	29	31	32	35	37	41	44	49	55	64	75	93
260	11	12	13	14	16	18	21	27	28	30	32	34	37	41	45	51	59	69	85
280	10	11	12	13	15	17	20	25	26	28	30	32	35	38	42	47	55	64	79
300	9	10	12	13	14	16	19	23	24	26	28	30	32	35	39	44	51	60	74
320	9	10	11	12	13	15	17	22	23	24	26	28	30	33	37	42	48	56	69
340	8	9	10	11	12	14	16	20	22	23	25	26	29	31	35	39	45	53	65
360	8	8	10	10	12	13	15	19	20	22	23	25	27	30	33	37	42	50	62
380	7	8	9	10	11	12	15	18	19	21	22	24	26	28	31	35	40	48	58
400	7	8	9	9	10	12	14	17	18	19	21	22	24	27	30	33	38	45	56
420	7	7	8	9	10	11	13	17	17	19	20	21	23	25	28	32	36	43	53
440	6	7	8	9	9	11	13	16	17	18	19	20	22	24	27	30	35	41	51
460	6	7	8	8	9	10	12	15	16	17	18	19	21	23	26	29	33	39	48
480	6	6	7	8	9	10	12	14	15	16	17	19	20	22	25	28	32	38	46
500	6	6	7	8	8	9	11	14	15	16	17	18	19	21	24	27	31	36	44
520	5	6	7	7	8	9	11	13	14	15	16	17	19	20	23	26	29	35	43
540	5	6	6	7	8	9	10	13	14	14	15	17	18	20	22	25	28	33	41
560	5	5	6	7	7	8	10	12	13	14	15	16	17	19	21	24	27	32	40
580	5	5	6	6	7	8	10	12	13	13	14	15	17	18	20	23	26	31	38
600	5	5	6	6	7	8	9	12	12	13	14	15	16	18	20	22	25	30	37
620	4	5	6	6	7	8	9	11	12	13	13	14	16	17	19	21	25	29	36
640	4	5	5	6	7	7	9	11	11	12	13	14	15	17	18	21	24	28	35
660	4	5	5	6	6	7	8	11	11	12	13	14	15	16	18	20	23	27	34
680	4	4	5	6	6	7	8	10	11	11	12	13	14	16	17	20	22	27	33
700	4	4	5	5	6	7	8	10	10	11	12	13	14	15	17	19	22	26	32
720	4	4	5	5	6	7	8	10	10	11	12	12	14	15	16	18	21	25	31
740	4	4	5	5	6	6	8	9	10	11	11	12	13	14	16	18	21	24	30

1. Calcule las **Horas por Mes** que operara su equipo.
- 2- Encuentre en línea de Horas por Mes la columna con el número resaltado.
- 3- Programe Scent Pause y Scent Work con los números de arriba de la columna.

De esta manera el relleno de su equipo durara por lo menos 30 días. Si desea aumentar la intensidad de la fragancia, programe un tiempo de Scent Pause menor; si desea reducirla, programe un tiempo de Scent Pause mayor (en la columna podrá ver la duración en días de su programación).



11/1/18

AromaQuest Systems, LLC.
3325 NW 70th Ave. • Miami, FL 33122, USA
Tel. 305-521-9077 • 1-800-653-9286
Fax 305-925-0825 • info@aromaquest.com